


INSTRUCTION MANUAL

DIGITAL HOSE END TIMER



CONTROL BUTTONS

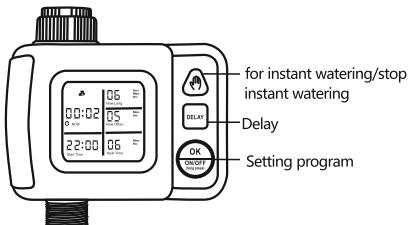

INSTALLING THE BATTERY


2 x AA ALKALINE BATTERIES ARE RECOMMENDED



Remove the battery cover – keep battery compartment dry – install the 2xAA Battery by lining up the connections.

Place the battery inside the compartment and reinstall the battery cover.

NOTE: When battery is first connected, it takes up to 1 minute for the battery indicator to assess the battery strength.

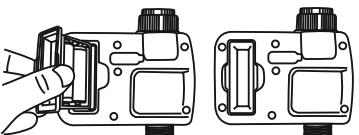

MAINTENANCE

Remove and clean the screen washer on inlet side of the timer every few months.

Remove battery if timer is not used for an extended time.

In freezing conditions, un-install the timer and bring it indoors to prevent damage.



HOW TO INSTALL

Attach the timer inlet to the outdoor faucet/spigot turning clockwise – hand tighten only. From the timer outlet connect a drip irrigation system or a garden hose.



Timer inlet:
3/4 in. female
hose thread
with screen
washer

Timer outlet:
3/4 in. male
hose thread

A SETTING – DAY&TIME



Set the current time, Press the turntable  first time, the "Now" will be flash, then press  again, the hours part will be start flash, Though roate the  left or right to increasing or decreasing. After hours setting, press  to set minutes. After set, Press  to save and back to "Now" flash

B SETTING – START TIME



Set the first time watering, Rotate  to right one grid, the "Start Time" will be flash, Press  the the hours part will be start flash, Though roate the  left or right to increasing or decreasing. After hours setting, press  to set minutes. After set, Press  to save and back to "START TIME" flash

C SETTING – HOW LONG



Set the how long, Rotate  to right one grid, the "How Long" will be flash, Press  to set watering time. Though roate the  left or right to increasing or decreasing. (watering time is 10-55s/ per 5seconds,1-59min/ per 1minute,1-24hrs/ per 1hour). After set, Press  to save and back to "How Long" flash

D SETTING – HOW OFTEN



Set the how often, Rotate  to right one grid, the "How Often" will be flash, Press  to set watering frequency. Though roate the  left or right to increasing or decreasing. (watering time is 1-59min/ per 1minute,1-23hrs/ per 1hour,1-7days/ per 1day). After set, Press  to save and back to "How Often" flash. Rotate  to right one grid, Nothing will be flash, It means Finish the automatic setting

E RAIN DELAY



After above setting, the "Next time" part will be automatic show as the interval of start time and the current time. Press the Delay button  the start time will be delay. Press first time is delay 6hours, second time is also delay 6hours, third time is delay 12hours, then press again, it will be delay 1day. After 10times, It will be back to initial setting.

F MANUEL OPERATION



Instantly water Press manual button  after  appear in the screen. The how long screen will flash. Though roate the  left or right to increasing or decreasing. After setting, Press  to save. Then when time arrive, it will be stop by itself. If you want to stop directly, Press  3seconds, it will be stop this time. This operate will no influence the automatic setting.